



G2 SOFTWARE UPGRADE INSTALLATION MANUAL

CONTENTS

1. Instructions
2. Warranty

1. INSTRUCTIONS

Installing your new software is straightforward. Please make sure you READ THESE INSTRUCTIONS CAREFULLY.




Installing your new G2 software chip:


Step 1 - Remove the screws indicated with the green arrows. Note the top row of screws on the front panel DO NOT need to be removed.




Step 2 - Lift the front and top panel up and place at the rear of the unit.

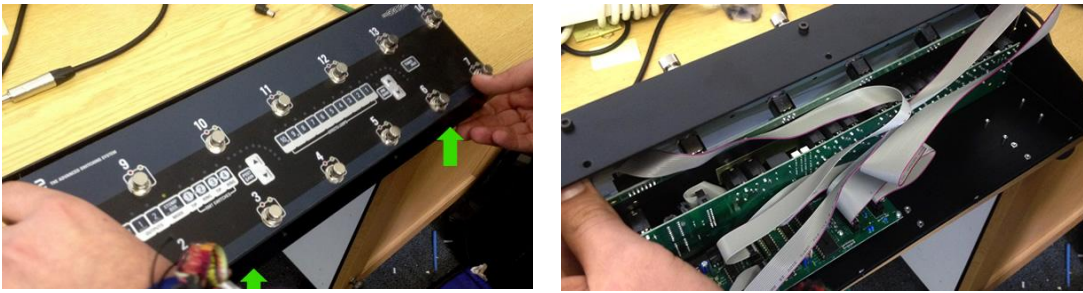

Step 3 - Locate the software chip on the motherboard.

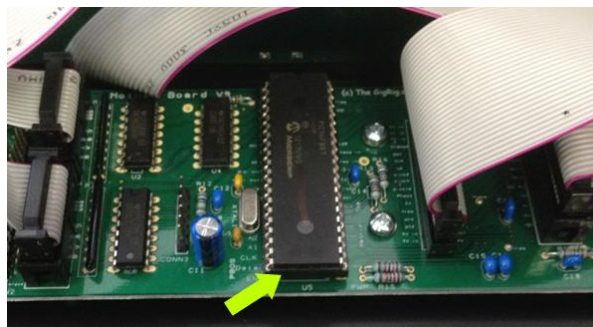


Step 4 - Lever out the chip gently with a pair of tweezers.

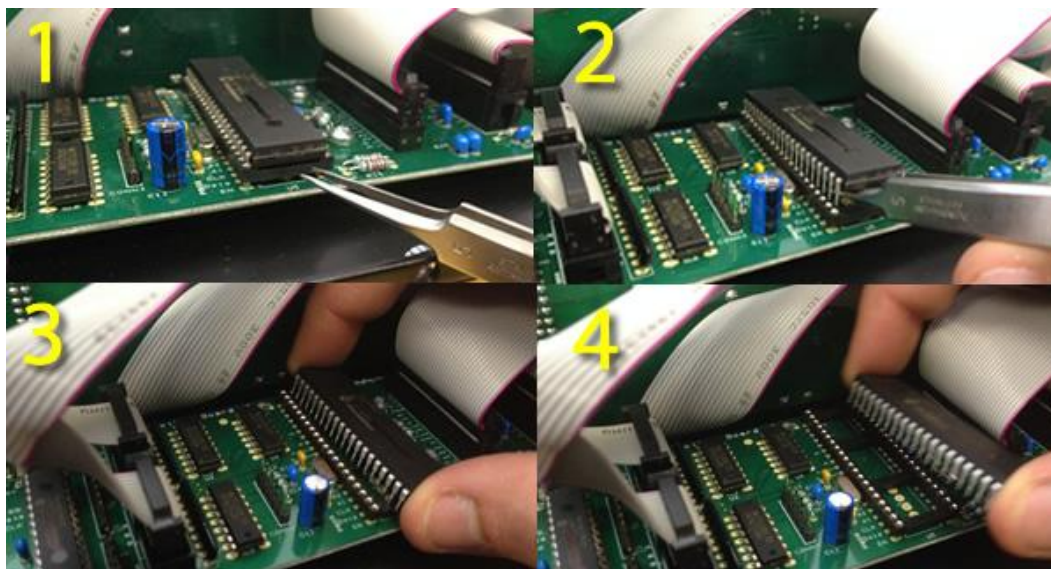


Step 5 - Now install your new software chip. It's very important that when you place the chip in the socket the small dimple / notch at one end needs to be closest to the backboard.



Step 6 - Using tweezers carefully apply even pressure and make sure the chip is fully installed. Make sure all the pins are inserted correctly.

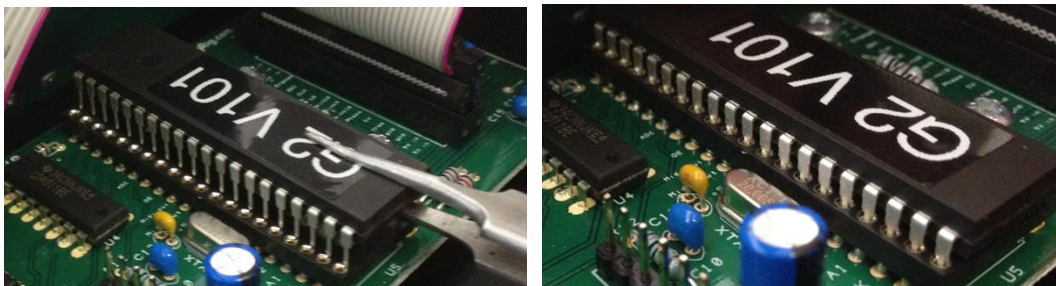

Step 7 – Follow steps 3 to 6 to update the Midi chip in the same way. The midi chip is located on the Motherboard to the left of where the foot switch cables are connected.

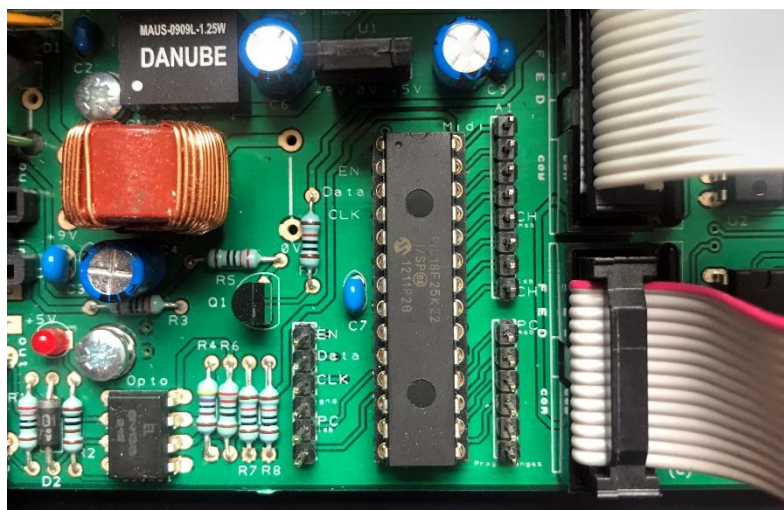

Step 8 - Replace all screws, then power up whilst holding down footswitch 2. Now press and hold footswitch 3 for 2 seconds. This will fully 'factory re-set' G2. Your software upgrade is now complete and your G2 is ready to be programmed.



2. WARRANTY

The GigRig warrants the product to be free from defects in material and workmanship for a period of 2 years from the original date of purchase.

If the product fails within the warranty period, The GigRig will repair or, at our discretion, replace the product and cover the cost of return shipping to the original purchaser. This warranty covers defects in manufacturing discovered while using this product as recommended by The GigRig. This warranty does not cover loss or theft, nor does the coverage extend to damage caused by misuse, abuse, unauthorized modification, improper storage, lightning, or natural disasters.

Damage caused by any of the above circumstances may result in a non-warranty repair fee. Legal: In the case of malfunction, the purchaser's sole recourse shall be repair or replacement, as described in the preceding paragraphs. The GigRig will not be held liable to any party for damages that result from the failure of this product. Damages excluded include, but are not limited to, the following: lost profits, lost savings, damage to other equipment, and incidental or consequential damages arising from the use, or inability to use this product.

In no event will The GigRig be liable for more than the amount of the purchase price, not to exceed the current retail price of the product. The GigRig disclaims any other warranties, express or implied. By using the product, the user accepts all terms herein.

Disposal: TheGigRig contains no batteries or Lead. Return the unit to TheGigRig Ltd for disposal or use standard disposal for electrical equipment recommended in your country. Do not dispose of electrical equipment in household waste!

TheGigRig is protected by copyright, moral rights, patent and design registration.

'GigRig' is a stylized trademark. No 2343300

Any individual or company found copying the functionality, look or feel, circuits, circuit function or software functions for commercial gain will be liable for legal action. Licenses may be granted to non-competing companies.

The GigRig and its Power supply are RoHs compliant.

Tested and compliant to EN 60950 safety standard.

The power supply is approved to all USA and European

Regulations including UL. See separate instructions supplied with the power supply

Manufacturer: The GigRig Ltd, Unit 15 Whitehill Industrial Pk, Royal Wootton Bassett, SN4 7DB

Authorised Representative: EAS - Mustamäe tee 50, 10621 Tallinn, Estonia

Warning: For indoor use only. Keep away from water. Keep away from Children.

