

**THE GIGRIG.COM**



# F S M FOOTSWITCH MANUAL

## CONTENTS

1. Introduction
2. Technical Specification
3. Warranty

## 1. INTRODUCTION

The G3 FSM Footswitch (Previously named the BANK MANAGER) is an easy way to remotely access the banks on TheGigRig G3.

Setting up your FSM Footswitch is simple: Just plug a patch cable between the FSM Footswitch and the Bank Input on the back panel of G3. Then enter the Deep Edit menu on the G3, select Bank Settings and enable Bank Extension Switch.

The FSM Footswitch will now work exactly as the bank up switch on the front panel of G3.

Once connected, simply press the FSM Footswitch and the G3 will bank up Press and hold and the G3 will bank down.



## 1. TECHNICAL SPECIFICATIONS

This unit is passive and does not require power.

DIMENSIONS - 4.5cm x 3.7cm x 6cm / 1.77" x 1.46" x 2.36"

WEIGHT - 0.07kg / 0.2lbs

## 4 WARRANTY

The GigRig warrants the product to be free from defects in material and workmanship for a period of 2 years from the original date of purchase.

If the product fails within the warranty period, The GigRig will repair or, at our discretion, replace the product and cover the cost of return shipping to the original purchaser. This warranty covers defects in manufacturing discovered while using this product as recommended by The GigRig. This warranty does not cover loss or theft, nor does the coverage extend to damage caused by misuse, abuse, unauthorized modification, improper storage, lightning, or natural disasters.

Damage caused by any of the above circumstances may result in a non-warranty repair fee. Legal: In the case of malfunction, the purchaser's sole recourse shall be repair or replacement, as described in the preceding paragraphs. The GigRig will not be held liable to any party for damages that result from the failure of this product. Damages excluded include, but are not limited to, the following: lost profits, lost savings, damage to other equipment, and incidental or consequential damages arising from the use, or inability to use this product.

In no event will The GigRig be liable for more than the amount of the purchase price, not to exceed the current retail price of the product. The GigRig disclaims any other warranties, express or implied. By using the product, the user accepts all terms herein.

**Disposal:** TheGigRig contains no batteries or Lead. Return the unit to TheGigRig Ltd for disposal or use standard disposal for electrical equipment recommended in your country. Do not dispose of electrical equipment in household waste!

TheGigRig is protected by copyright, moral rights, patent and design registration.

'GigRig' is a stylized trademark. No 2343300

Any individual or company found copying the functionality, look or feel, circuits, circuit function or software functions for commercial gain will be liable for legal action. Licenses may be granted to non-competing companies.

The GigRig and its Power supply are RoHs compliant.

Tested and compliant to EN 60950 safety standard.

The power supply is approved to all USA and European

Regulations including UL. See separate instructions supplied with the power supply

Manufacturer: The GigRig Ltd, Unit 15 Whitehill Industrial Pk, Royal Wootton Bassett, SN4 7DB

Authorised Representative: EAS - Mustamäe tee 50, 10621 Tallinn, Estonia

Warning: For indoor use only. Keep away from water. Keep away from Children.

